

Koncovka	Zařízení
E1	<p>MOTOROLA Series : ---- C250, C300, C330, C332, C333, C336, C350, C359, C375, C380, C385, C390, C450, C550, C650, C651, E375, E380, T180, T191, T192, T2288, V150, V180, V220, V2288</p> <p>NOKIA Series : ---- 1100, 1101, 1110, 1110i, 1112, 1221, 1260, 1261, 1600, 2100, 2112, 2115i, 2116, 2116i, 2118, 2125, 2125i, 2126i, 2128i, 2255, 2260, 2270, 2275, 2280, 2285, 2300, 2355, 2600, 2610, 2650, 2651, 2652, 3100, 3105, 3108, 3110, 3120, 3125, 3200, 3205, 3205i, 3220, 3230, 3300, 3315, 3320, 3330, 3350, 3360, 3361, 3385, 3390, 3395, 3410, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3587i, 3588i, 3589i, 3590, 3595, 3600, 3610, 3620, 3660, 3810, 5100, 5110, 5140, 5140i, 5146, 5210, 5510, 6010, 6012, 6015, 6015i, 6016i, 6019i, 6020, 6021, 6030, 6060, 6060v, 6061, 6062, 6108, 6150, 6170, 6200, 6220, 6225, 6230, 6230i, 6235, 6235i, 6236i, 6255, 6255i, 6256i, 6260, 6310, 6310i, 6360, 6370, 6385, 6390, 6500, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6651, 6670, 6680, 6681, 6682, 6800, 6810, 6820, 6820i, 6822, 7110, 7200, 7250, 7250i, 7260, 7270, 7280, 7380, 7600, 7610, 7650, 7700, 7710, 8200, 8210, 8250, 8260, 8260G, 8265, 8270, 8280, 8290, 8300, 8310, 8390, 8800, 8801, 8850, 8850 Gold, 8855, 8890, 8910, 8910i, 9210i, 9290, 9300, 9300i, 9500, E60, E70, N-Gage</p> <p>PIONEER Series : ---- GEX-INN01</p>
E2	<p>HP Series : ---- PhotoSmart C500, PhotoSmart C500xi</p> <p>KODAK Series : ---- DC-4800Z</p> <p>PENTAX Series : ---- OPTIO 330, OPTIO 430</p> <p>RICOH Series : ---- CAPLIO RR1, Caplio RDC-i500, Caplio RR10, DC-2S, DC-3, DC-3Z, DC-4, DC-4T, DC-4U, RDC-1700, RDC-2, RDC-200G, RDC-4200, RDC-4300, RDC-5000, RDC-5300, RDC-6000, RDC-7, RDC-7S, RDC-SPECIAL</p>
G1	<p>TOSHIBA Series : ---- e800, e805, e830</p>
G8	<p>NINTENDO Series : ---- NDS</p>
G9	<p>NINTENDO Series : ---- NDS Lite</p>
M1	<p>APPLE Series : iPhone iPhone 3G, iPhone 3GS, iPhone 4G, iPhone 4S Series : iPod iPod 3rd Gen, iPod 4th Gen, iPod 4th Gen 20GB, iPod 5th Gen 30GB, iPod 5th Gen 60GB, iPod 6th Gen 80GB, iPod Photo 30GB, iPod Photo 40GB, iPod Photo 60GB, iPod mini Series 1st Gen 4GB, iPod mini Series 1st Gen 6GB, iPod mini Series 2nd Gen 4GB, iPod mini series 2nd Gen 6GB, iPod nano Series 1st Gen 1GB, iPod nano Series 1st Gen 2GB, iPod nano Series 1st Gen 4GB, iPod nano Series 2nd Gen 2GB, iPod nano Series 2nd Gen 4GB, iPod nano Series 3rd Gen 4GB, iPod nano Series 3rd Gen 8GB, iTouch</p>
	<p>ERICSSON Series : ---- A2218Z, A2618sc, A2628sc, A3618sc, R300LX, R300d, R300z, R310sc, R320sc, T20ec, T20sc, T28, T28sc, T28z, T29sc, T39, T39m, T60d, T65, T66, T68 Brand : SONY ERICSSON Series : ----</p>

M2	A2218, A2218z, A2618, A2628, C1002S, F500i, J200c, J200i, J210, J210c, J210i, J300, J300a, J300c, J300i, K300, K300a, K300c, K300i, K500, K500c, K500i, K506c, K508c, K508i, K600i, K608i, K700, K700c, K700i, P800, P800c, P802, P900, P902, P908, P910, P910a, P910c, P910i, P990c, R300LX, R300z, R310, R320, R380 World, R380e, R380s, R3ood, R520m, R600, S700, S700c, S700i, S710a, T100, T105, T200, T20e, T20s, T226, T226m, T226s, T230, T237, T237S, T238, T28 World, T28s, T28z, T29, T290, T290a, T290c, T290i, T300, T302, T306, T310, T312, T316, T39, T39m, T600, T606, T608, T60LX, T60c, T60d, T610, T610NZ, T616, T618, T61c, T61d, T61lx, T61z, T628, T62u, T630, T637, T65, T66, T66m, T68, T68i, T68ie, T68m, V600i, V800, Z1010, Z200, Z208, Z300, Z300a, Z300c, Z300i, Z500, Z500a, Z500c, Z500i, Z600, Z800, Z800i
M3	MOTOROLA Series : --- 120c, 120t, 270c, 280, 60c, 60t, 720c, A630, A728, A760, A760i, A768, A768i, A840, A845, A860, C300 Series, C331g, C331t, C333, C333g, C341, C343, C353T, C975, C980, E1, E310, E398, E550, E815, MPX, MPx220, T280, T280i, T300p, T700 Series, T700i, T720 Series, T720c, T720g, T720i, T720ti, T721 Series, T721g, T722 Series, T722i, T725, T730 Series, T730c, T730i, T731 Series, T731c, V120t, V120x, V210 Series, V260, V260 Series, V262, V265, V266, V276, V300, V300 Series, V303, V303P, V330, V400, V400 Series, V400P, V500, V500 Series, V501, V505, V525, V535, V545, V547, V550, V551, V60, V60 Series, V600, V600 Series, V600i, V60c, V60ci Bell, V60ci Telus, V60g, V60gi, V60i, V60i TDMA Colour, V60ig, V60it, V60p, V60s, V60t, V60ti, V620, V635, V65p, V66, V66i, V70, V710, V80, V810
M4	NOKIA Series : ---- 1680 Classic, 2220 Slide, 2323 Classic, 2600 Classic, 2680 Slide, 2720 fold, 2730 classic, 3109 Classic, 3110 Classic, 3120 Classic, 3155i, 500, 600, 700, 701, 770, 1200, 1202, 1203, 1208, 1209, 1255, 1280, 1616, 1650, 1661, 1662, 1680, 1770, 1800, 2310, 2630, 2660, 2680, 2690, 2710, 2730, 2760, 2855, 2865, 3152, 3155, 3250, 3250 XpressMusic, 3310, 3500 Classic, 3555, 3600 Slide, 3610 Fold, 3650, 3710 fold, 3720 Classic, 5000, 5030, 5030 Xpress Radio, 5070, 5200, 5220, 5220 XpressMusic, 5228, 5230, 5232, 5235 Comes With Music, 5235 Ovi Music Unlimited, 5236, 5238, 5250, 5300, 5300 XpressMusic, 5310 Comes With Music Edition, 5310 XpressMusic, 5320, 5330 Mobile TV Edition, 5330 XpressMusic, 5500 Sport, 5530 XpressMusic, 5610, 5610 XpressMusic, 5630 XpressMusic, 5700, 5700 XpressMusic, 5730 XpressMusic, 5800 Comes With Music, 5800 Navigation Edition, 5800 XpressMusic, 6070, 6080, 6085, 6086, 6088, 6100, 6101, 6102, 6102i, 6103, 6110 Navigator, 6111, 6120, 6121 Classic, 6124 Classic, 6125, 6126, 6131, 6136, 6151, 6152, 6155, 6155i, 6165, 6165i, 6210 Netvigator, 6212 Classic, 6216 Classic, 6220 Classic, 6233, 6234, 6263, 6265i, 6267, 6268, 6270, 6275, 6280, 6282, 6288, 6290, 6300, 6300i, 6301, 6303 classic, 6303 classic Illuvial, 6303i classic, 6500 Slide, 6555, 6600 fold, 6600 slide, 6600i slide, 6700 Classic, 6700 classic Illuvial, 6700 slide, 6720 classic, 6730 Classic, 6760 slide, 7020, 7070 Prism, 7100 Supernavo, 7210, 7210 Supernova, 7230, 7310 Supernova, 7360, 7370, 7373, 7390, 7500 Prism, 7510 Supernova, 7610 supernova, 8800, 8800 Sirocco, Asha 200, Asha 201, Asha 300, Asha 303, Astound, C1-00, C1-01, C1-02, C2-00, C2-01, C2-02, C2-03, C2-05, C2-06, C3 Touch and Type, C3-00, C3-01, C5-00, C5-01, C5-03, C5-04, C6-00, C6-01, C7-00, E5-00, E50, E51, E6-00, E61, E61i, E63, E65, E66, E71, E71x, E72, E72i, E75, E90 Communicator, N-Gage QD, N70, N70 Music Edition, N71, N72, N73, N73 Music Edition, N75, N76, N77, N78, N79, N8-00, N80, N80 Internet Edition, N800, N800 Internet Tablet, N81, N81 8GB, N810 Internet Tablet, N810 WiMAX Edition, N82, N90, N91, N91 8GB, N92, N93, N93i, N95, N95 8GB, N96, Navigation Edition, PT-6, X1-01, X2-00, X2-05, X3, X3-01, X3-02, X5-00, X6
M5	SAMSUNG Series : ---- SCH-U420, SGH-C170, SGH-D520, SGH-D528, SGH-D800, SGH-D807, SGH-D808, SGH-D820, SGH-D830, SGH-D840, SGH-D840C, SGH-D848, SGH-D888, SGH-D900, SGH-D900i, SGH-E200, SGH-E250, SGH-E390, SGH-E420, SGH-E500, SGH-E570, SGH-E590, SGH-E740, SGH-E780, SGH-E790, SGH-E830, SGH-E840, SGH-E870, SGH-E900, SGH-E950, SGH-F200, SGH-F300, SGH-F330, SGH-F500, SGH-I600, SGH-I607, SGH-J600i, SGH-L170, SGH-L600, SGH-M300, SGH-P300, SGH-P310, SGH-T329, SGH-T509, SGH-T519, SGH-T629, SGH-T809, SGH-U100, SGH-U300, SGH-U600, SGH-U700, SGH-X208, SGH-X530, SGH-X820, SGH-X830, SGH-Z150, SGH-Z170, SGH-Z230, SGH-Z400, SGH-Z510, SGH-Z540, SGH-Z560, SGH-Z630, SGH-Z710, SGH-Z720, SGH-ZV40, SGH-i520, SGH-i620, SGH-i718, SGH-j400, SGH-j600, SGH-j750, SPH-M610
	SONY ERICSSON Series : ----

M6	<p>Aino, C510, C702a, C702i, C901 GreenHeart, C902, C902i, C903, C905, D750i, Elm, F305, G502, G700i, G705, G900i, Hazel, J100a, J100c, J100i, J110a, J110c, J110i, J120c, J120i, J220a, J220c, J220i, J230c, J230i, Jalou, K200a, K200c, K200i, K220c, K220i, K310a, K310c, K310i, K320i, K330, K510a, K510c, K510i, K530i, K550IMi, K550c, K550i, K550im, K610i, K610im, K618i, K630i, K660i, K750c, K750i, K758c, K770i, K790a, K790c, K790i, K800i, K810i, K818c, K850i, K858i, M600i, M608c, Naite, Naite a, P1i, P990i, R300i, R306i, S302, S312, S500i, Satio, T250i, T270i, T280i, T303, T650i, T658i, T700, T707, T715, V630i, V640i, W200a, W200c, W200i, W205, W300c, W300i, W302, W350a, W350i, W380a, W380i, W395, W508, W518a, W550c, W550i, W580i, W595, W595s, W600, W600c, W600i, W610c, W610i, W660i, W700c, W700i, W705, W710c, W710i, W712a, W715, W760, W760i, W800, W800c, W800i, W810c, W810i, W830c, W830i, W850i, W880i, W888c, W890i, W898c, W900c, W900i, W902, W908c, W910i, W950c, W950i, W958c, W960i, W980i, W995, Xperia Pureness, Yari, Z250i, Z258i, Z310a, Z310i, Z320i, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z555i, Z558c, Z558i, Z610i, Z710c, Z710i, Z750a, Z750i, Z770i, Z780a</p>
M7	<p>SHARP Series : ---- 550SH, 770SH, GX-E30, GX-F200, GX-L15, GX-T15, GX-T17, GX-T25, GX-T29, GX-T300, GX15, GX17, GX25, GX29, GX293, GX30, GX30c, GX30i, GX31, GX32, GX40, GZ200, SX633, SX663, WX-T81</p>
M8	<p>SAMSUNG Series : ---- SGH-A300, SGH-A400, SGH-A800, SGH-B500, SGH-C100, SGH-C110, SGH-C120, SGH-C130, SGH-C200, SGH-C210, SGH-C300, SGH-D410, SGH-D500, SGH-D508C, SGH-D600, SGH-D608, SGH-D720, SGH-E100, SGH-E300, SGH-E310, SGH-E330, SGH-E330N, SGH-E340, SGH-E350, SGH-E350E, SGH-E360, SGH-E370, SGH-E380, SGH-E400, SGH-E530, SGH-E600, SGH-E610, SGH-E630, SGH-E700, SGH-E710, SGH-E720, SGH-E730, SGH-E760, SGH-E770, SGH-E800, SGH-E820, SGH-E850, SGH-N100, SGH-N400, SGH-N500, SGH-N600, SGH-N620, SGH-P200, SGH-P400, SGH-P510, SGH-P730, SGH-Q100, SGH-Q200, SGH-R210S, SGH-S100, SGH-S300, SGH-S400i, SGH-S500, SGH-S500i, SGH-S508, SGH-T100, SGH-T400, SGH-V200, SGH-X100, SGH-X140, SGH-X150, SGH-X160, SGH-X200, SGH-X210, SGH-X300, SGH-X450, SGH-X460, SGH-X480, SGH-X500, SGH-X520, SGH-X530, SGH-X600, SGH-X620, SGH-X630, SGH-X640, SGH-X650, SGH-X660, SGH-X670, SGH-X680, SGH-X700, SGH-X810, SGH-Z105, SGH-Z130, SGH-Z300, SGH-Z500, SGH-i300, SGH-i320</p>
M9	<p>LG Series : ---- AX380, AX565, Arena KM900, CB630 Invision, CHERRY, CHOCOLATE, CHOCOLATE MINT, CHOCOLATE PINK, CHOCOLATE WHITE, CP150, CU720 Shine, CU915, CU915 Vu, CU920, CU920 Vu-TV, F2250, Flare, GB102, GB106, GB125, GB220, GB250, GB255, GC900 Viewty Smart, GD330, GD580, GD910, GM730, GS101, GT365 Neon, GT500 Puccini, GW520, GW550, HB620T, Invision, KB770, KC550, KC560, KC780 Reina, KC910 Renoir, KE800 Chocolate Platinum, KE820, KE850 Prada, KE90, KE970 Shine, KF300, KF310, KF311, KF350, KF390, KF510, KF600 Venus, KF700, KF750 Secret, KF757 Secret, KF900 Prada, KF900 Prada II, KG320, KG800 Chocolate, KG810, KG820, KG920, KM380T, KP100, KP105, KP130, KP170, KP215, KP235, KP260, KP275, KP500, KP501, KP501 Cookie, KP502, KS20, KS360, KS365, KS500, KT520, KT770, KU250, KU380, KU950, KU970 Shine, KU990, KU990 Viewty, KU990R, KU990i, KX500, LG600G, LX150, LX165, Mystique UN610, Shine KE770, Shine KE970, UN610 Mystique, UX565, VIEWTY LITE, VX10000 VOYAGER, VX8550 Black, VX8550 Dark Blue, VX8550 Dark Red, VX8550 Ice Blue, VX9900, Viewty, WAVE, enV</p>
	<p>BLACKBERRY Series : ---- 8230, 9500, Bold 9650, Bold 9700, Bold 9780, Bold 9900, Bold 9930, Curve 3G 9300, Curve 8500, Curve 8520, Curve 8530, Curve 8900, Curve 9350, Curve 9360, Curve 9370, Pearl 3G, Pearl 3G 9100, Pearl 8220, Pearl Flip 8200, Storm 9530, Storm2 9520, Storm2 9550, Style 9670, Torch 9800, Torch 9810, Torch 9850, Torch 9860, Tour 9630</p> <p>GoPro Series : ---- HD Hero2</p> <p>HTC Series : ---- 7 Mozart, 7 Pro, 7 Trophy, A6363, Aria, Chacha, Desire, Desire HD, Desire S, Desire Z, EVO 3D, Endeavor, Explorer, Flyer, G16, G6, G8, G9, Gratia, HD2, HD7, Incredible S, Legend, Mozart, One S, One V, One X, Primo, Radar, Rhyme, Salsa, Sensation, Sensation XE, Sensation XL, Titan, Ville, Vision, Widfire S, Wildfire, Wildfire S, Z715e</p> <p>Kindle Series : ----</p>

Kindle, Kindle 2, Kindle 2 International, Kindle 3, Kindle DX, Kindle DX International, Kindle Fire, Kindle Touch, Kindle Touch 3G

LENOVO

Series : ThinkPad

ThinkPad Tablet

LG

Series : ----

A110, A133, A170, A200, A310, Accolade VX5600, Arena GT950, BL20, BL40, Banter Touch UN510, Bliss UX700, C310, C320, C360, C660, C800, COOKIE 3G T320, COOKIE FRESH GS290, COOKIE LITE T300, COOKIE LIVE KM570, COOKIE PLUS GS500, COOKIE STYLE T310, CRYSTAL GD900, Encore GT550, GD310, GD350, GD510, GD570 dLite, GD710 Shine 2, GD880, GD900, GM730, GM750, GR700 Vu Plus, GS105, GS108, GS170, GS390 Prime, GS500V, GS505 Sentio, GT350, GT405, GT500, GT505, GT540, GT550 Encore, GT950 Arena, GU230, GU285, GU292, GU295, GW300, GW370 Neon II, GW520, GW620, GX200, GX500, Gray C800, KF757, KM555, KT770, KV600, KX186, KX190, KX195, KX197, KX216T, KX218, KX266T, KX300, LG230, LN240, LN510 Rumor Touch, LX610 Lotus Elite, Lotus Elite LX610, MINI GD880, MN240, MS690 Optimus M, Neon II GW370, OPTIMUS 2X P990, OPTIMUS 7 E900, OPTIMUS CHAT C550, OPTIMUS CHIC E720, OPTIMUS ME P350, OPTIMUS NET, OPTIMUS ONE P500, OPTIMUS SOL E730, Octane VN530, Optimus 3D, Optimus 3D Max, Optimus Black P970, Optimus Elite, Optimus M MS690, Optimus T, P509, P725, P920, POP GD510, POPCORN GU280, PRADA II KF900, PURE GD550, Prime GS390, Rumor Touch LN510, SWIFT GT540, Sentio GS505, Shine 2 GD710, T315, TOWN C300, UN430 Wine 2, UN510 Banter Touch, UX220, UX700 Bliss, VIEWTY SMILE GT400, VIEWTY SNAP GM360, VN250 Cosmos, VN530 Octane, VS660 Vortex, VX5600 Accolade, Vortex VS660, Vu Plus GR700, Wine 2 UN430, dLite GD570, myTouch Q, myTouch Q 4G

MOTOROLA

Series : ----

ATRIX 2, Atrix 4G, Aura, Backflip, Bravo, Brute i680, Brute i686, CLIQ, CLIQ 2, CLIQ XT, Charm, Citrus, Clutch i475, Defy, Droid 2 Global, Droid 3, Droid Bionic, Droid Pro, Droid X, Droid X2, E8, ELECTRIFY, EM325, Flipout, Flipside, MB860, Milestone, Milestone X, MotoNav TN555, MotoNav TN565t, MotoNav TN765t, Photon 4G, Q9, Q9e, Q9h, QA30, Quantico, RAZR VE20, RAZR2 V8, RAZR2 V9, ROKR E8, Theory, Titanium, Triumph, U9, V8 2GB, V8 LUX, XPRT, Xoom 2 (MZ615), Z9, ZN4, ZN5, i1, i412

NOKIA

Series : ----

2605 Mirage, 2705 Shade, 3710 fold, 603, 3711, 5630 XpressMusic, 6205, 6350, 6500 Classic, 6500c, 6700 Classic, 7205 Intrigue, 7230, 7612s, 7705 Twist, 7900 Prism, 8208, 8600 Luna, 8800 Arte, 8800 Carbon Arte, 8800 Gold Arte, 8800 Sapphire Arte, C6-01, E52, E7-00, E7-00i, E72, E75, Lumia 710, Lumia 800, Lumia 900, N8, N85, N86 8MP, N9, N900, N97, N97 mini, X2-00, X5-01, X7-00

Brand : PALM

Series : ----

Treo Pro

SAMSUNG

Series : ----

4G LTE Mobile Hotspot, Acclaim SCH-R880, Admire SCH-R720, B5722, B7300, B7330, B7610, B7610 Omnia Pro, B7620 Giorgio Armani, B7722, Beam I8520, Beat DISC M6710, Behold SGH-T939, Blade S5600v, Blue Earth, Brightside, C3530, C5510, C6112, Caliber SCH-R850, Caliber SCH-R860, Captivate Glide, Captivate Glide SGH-I927, Captivate SGH-I897, Champ C3300K, Character SCH-R640, Chat B3410W, Chrono SCH-R261, Code SCH-I220, Comment SCH-R380, Conquer 4G SPH-D600, Continuum SCH-I400, Contour SCH-R250, Convoy 2 SCH-U660, Craft SCH-R900, DV300F, Dart SGH-T499, DoubleTime SGH-I857, Droid Charge SCH-I510, E2100, E2370, E2652W, Epic 4G SPH-D700, Eternity II SGH-A597, Everygreen SGH-A667, Exclaim SPH-M550, Exec SCH-I225, Exhibit 4G SGH-T759, Exhibit II 4G SGH-T679, Factor SPH-M260, Flight SGH-A797, Flight SGH-A927, Focus 2, Focus Flash SGH-I917, Focus S SGH-I937, Focus SGH-I677, Focus SGH-I917, Freedom III SCH-R380, Freedom SCH-R260, Freedom SCH-R350, Freedom SCH-R351, Freeform II SCH-R360, GALAXY Nexus, GALAXY W, GT-I9020A, GT-I9020T, GT-I9023, GT-I9100M, GT-S6102, GT-i9250, Galaxy 3 I5800, Galaxy 580 I5801, Galaxy Ace S5830, Galaxy Apollo I5801, Galaxy Anneal, Galaxy Attain 4G, Galaxy Gio S5560, Galaxy Indulge SCH-

M10

Galaxy Nexus (Verizon), Galaxy Note, Galaxy Note i717, Galaxy Precedent SCH-M828C, Galaxy Prevail SPH-M820, Galaxy Proclaim, Galaxy R, Galaxy S 4G SGH-T959V, Galaxy S Blaze, Galaxy S I9000, Galaxy S II 4G, Galaxy S II SGH-I777, Galaxy S II SGH-T989, Galaxy S II Skyrocket SGH-I727, Galaxy S Plus I9001, Galaxy S II I9100, Galaxy SII HD LTE, Galaxy SL i9003, Galaxy Xcover, Galaxy Y Duos, Galaxy Y S5360, Galaxy mini S5570, Gem SCH-I100, Glamour S5150, Gravity SGH-T479, Gravity Smart SGH-T589, Gravity TXT QWERTY, Gravity TXT SGH-T379, Gravity Touch SGH-T669, Gusto 2, Gusto SCH-U360, H1, Haven SCH-U320, Highnote SPH-M630, I8520 Halo, Illusion SCH-I110, Indulge SCH-R915, Infuse 4G SGH-I997, Instinct HD SPH-M850, Intensity SCH-U460, Intercept SPH-M910, Intrepid SPH-I350, Jet Ultra Edition, Lindy M5650, M2310, M2510, M3310, M7500 Emporio Armani, M7600 BEAT DJ, Mesmerize SCH-I500, Message Touch SCH-R630, Messenger II SCH-R560, Messenger III QWERTY, Messenger III SCH-R570, Messenger SCH-R631, Moment SPH-M900, Mondì SWD-M100, Monte Bar C3200, Monte Slider E2550, MyShot II SCH-R460, Mythic SGH-A897, Nexus S, Nexus S 4G SPH-D720, Omnia II SCH-I920, Omnia Lite, Omnia PRO 4 B7350, Pixon12, Player Star, Profile QWERTY, Profile SCH-R580, Rant SPH-M540, Reality SCH-U820, Reclaim SPH-M560, Replenish SPH-M580, Repp SCH-R680, Restore, Restore QWERTY, Restore SPH-M570, Restore SPH-M575, Rugby, Rugby SGH-A847, S3370, S5530, S5600 Preston, S5690, S6700, S7220 Ultra Classic, S7220 Ultra b, S7350, S7350 Ultra s, S8000 Jet, S8000H, S8300 Ultra Touch, SCH-I515, SCH-LC11, SCH-R335C, SCH-R355, SCH-R455C, SCH-R570, SCH-R580, SCH-R920, SCH-S720C, SCH-U380, SGH-A157, SGH-A187, SGH-A197, SGH-G810, SGH-I667, SGH-I717, SGH-I717RWAATT, SGH-I717ZBAATT, SGH-I757M, SGH-I827, SGH-I847, SGH-I927, SGH-T249, SGH-T259, SGH-T330, SGH-T340G, SGH-T369, SGH-T379, SGH-T528G, SGH-T769, SPH-D710, SPH-M220, SPH-M240, SPH-M320, SPH-M330, SPH-M360, SPH-M370, SPH-M570, SPH-M575, Seek SPH-M350, Shark S5350, Sidekick 4G SGH-T839, Smiley SGH-T359, Solstice II SGH-A817, Stratosphere SCH-I405, Stride SCH-R330, Strive SGH-A687, Stunt SCH-R100, Suede SCH-R710, Sunburst SGH-A697, Tocco Ultra Edition, Transfix SCH-R730, Transform SPH-M920, Transform Ultra SPH-M930, Trender SPH-M380, TwoStep SCH-R470, Vibrant SGH-T959, Wave 2 Pro S5330, Wave 2 S5250, Wave 575 S5750E, Wave 723

SONY ERICSSON

Series : ----

Apsen, Aspen, Cedar, LT260i, LT28i, Live with Walkman, MT25i, MT27i, Mix Walkman, Neo V, ST25i, ST27i, Spiro, Vivaz, Vivaz pro, W8 Walkman, XPERIA X10, Xperia Acro HD, Xperia E15i, Xperia NX SO-02D, Xperia Neo, Xperia P LT22i, Xperia S, Xperia S LT26i, Xperia Sola, Xperia U, Xperia X1, Xperia X10 mini, Xperia X10 mini pro, Xperia X1a, Xperia X2, Xperia X2a, Xperia X8, Xperia active, Xperia arc, Xperia arc S, Xperia go, Xperia ion, Xperia ion LT28i, Xperia mini, Xperia mini pro, Xperia neo L, Xperia neo L MT25i, Xperia ray, Yendo, txt, txt pro

SAMSUNG

Series : ----

Armani, B2100, B2700, B300, B3210 Genio, B3310, B3410, B510, B5310 CorbyPro, B5702, B7300, C3050, C3510, C5212 Dual Sim, C6625, D980, E1130, E1360, E215, Guru100, L770, M150, M200, M310, M3200 Beat S, M3510 BEAT b, Omnia, Omnia Pro B7320, Qbowl, S3030 Tobi, S3100, S3500, S3550 SHARK 3, S3650 Genio, S5230 Star, S5233, S5560, S5620 Monte, S7070, S7330, S7350I Ultra Slide, S8300 Tocco Ultra, SCH-I770, SCH-I910, SCH-R210, SCH-R211, SCH-R300, SCH-R310, SCH-R311, SCH-R375C, SCH-R420, SCH-R430, SCH-R450, SCH-R451, SCH-R520, SCH-R550, SCH-R600, SCH-R800, SCH-R810, SCH-U310, SCH-U350, SCH-U430, SCH-U440, SCH-U450, SCH-U490, SCH-U640, SCH-U650, SCH-U750, SCH-U810, SCH-U960, SGH-A107, SGH-A137, SGH-A167, SGH-A177, SGH-A237, SGH-A257, SGH-A637, SGH-A657, SGH-A697, SGH-A767, SGH-A777, SGH-A837, SGH-A867, SGH-A877, SGH-A887, SGH-C450, SGH-D880, SGH-E210, SGH-F210, SGH-F250, SGH-F400, SGH-F488, SGH-F490, SGH-F700, SGH-G600, SGH-G800, SGH-I617, SGH-I627, SGH-I637, SGH-I907, SGH-J610, SGH-J700, SGH-L760, SGH-M110, SGH-M600, SGH-M610, SGH-T101G, SGH-T105G, SGH-T109, SGH-T119, SGH-T139, SGH-T155G, SGH-T201G, SGH-T229, SGH-T239, SGH-T245G, SGH-T255G, SGH-T301G, SGH-T339, SGH-T349, SGH-T401G, SGH-T404G, SGH-T459, SGH-T469, SGH-T559, SGH-T659, SGH-T749, SGH-T919, SGH-T929, SGH-U800, SGH-i200, SGH-i550, SGH-i640, SGH-i780, SGH-i908, SPH-A310, SPH-M340, SPH-M800, SPH-M810, SPH-Z400, Solid, Tocco, U900 Soul, i450, i640v, i7110 Pilot, i908, miCoach

M11

PALM

Series : ----

M130, M535, Tungsten T, Tungsten W, ZIRE 71

P1

HP

Series : ----

P2	<p>iPAQ 1900 Series, iPAQ 1930 Series, iPAQ 1940 Series, iPAQ H2200 Series, iPAQ H2210 Series, iPAQ H4100 Series, iPAQ H4150 Series, iPAQ PE2028A, iPAQ PE2028AS, iPAQ PE2028B, iPAQ PE2050X, iPAQ PE2051, iPAQ PE2060, iPAQ PE2062, iPAQ h1910, iPAQ h1915, iPAQ h1920, iPAQ h1930, iPAQ h1935, iPAQ h1937, iPAQ h1940, iPAQ h1945, iPAQ h2215, iPAQ h3000, iPAQ h3630, iPAQ h3800, iPAQ h3900, iPAQ h4155, iPAQ h4300, iPAQ h4350, iPAQ h4355, iPAQ h48xx, iPAQ h5000, iPAQ h5400 Series, iPAQ h5450 Series, iPAQ h5455 Series, iPAQ h5470 Series, iPAQ h5500 Series, iPAQ h5550 Series, iPAQ h6300 Series, iPAQ h6315, iPAQ h6340, iPAQ h6365, iPAQ hw6000, iPAQ hw6500, iPAQ hw6515, iPAQ hw6900, iPAQ hw6910, iPAQ hw6915, iPAQ hx2000, iPAQ hx2100, iPAQ hx2110, iPAQ hx2115, iPAQ hx2190, iPAQ hx2190b, iPAQ hx2400, iPAQ hx2410, iPAQ hx2415, iPAQ hx2490, iPAQ hx2490b, iPAQ hx2700, iPAQ hx2750, iPAQ hx2755, iPAQ hx2790, iPAQ hx4000 Series, iPAQ hx4700, iPAQ hx4705, iPAQ rx1900, iPAQ rx1950, iPAQ rx3000, iPAQ rx3100 Series, iPAQ rx3115, iPAQ rx3400 Series, iPAQ rx3415, iPAQ rx3417, iPAQ rx3700 Series, iPAQ rx3715, iPAQ rz1700, iPAQ rz1710, iPAQ rz1715, iPAQ rz1717, iPAQ h1700 Series, iPAQ h1900 Series, iPAQ h3000 Series, iPAQ h3800 Series, iPAQ h3900 Series, iPAQ h4300 Series, iPAQ h4700 Series, iPAQ hw6500 Series, iPAQ hx2000 Series</p>
P4	<p>MOTOROLA Series : ----</p> <p>A1200, A1200 Ming, A1200R, A668, A780, A910, C290, E1070, E6, E680, E680i, E770v, E816, K1, K3, L2, L6, L6 i-mode, L7, L7 iMode, L72, MOTOPEBL, MOTOSLVR L9, Maxx Ve, PEBL U6, RAZR V3, RAZR V3c, RAZR V3i, RAZR V3m, RAZR V3r, RAZR V3t, RAZR V3xx, ROKR E2, V191, V235, V3, V3 iMode, V360, V360v, V3X, V3i D&G, V6, VU204, W315, W375, W510, W755, Z10, Z3, Z6, Z8, i605, tundra VA76r</p>
P5	<p>ASUS Series : ----</p> <p>A626, A686, A696, M530W, P320, P525, P526, P527, P535, P550, P735, P750, P835, R300, R600, R700</p> <p>BLACKBERRY Series : ----</p> <p>6210, 6220, 6230, 6280, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7730, 7750, 8100, 8110, 8120, 8130, 8300, 8310, 8320, 8330, 8350, 8700c, 8700f, 8700g, 8700r, 8700v, 8703e, 8707v, 8800, 8820, 8830, 9000 Bold</p> <p>Brand : HP Series : ----</p> <p>iPAQ 100 Series, iPAQ 110 Series, iPAQ 210 Series, iPAQ 300 Series, iPAQ 310 Series, iPAQ 510 Series, iPAQ 512, iPAQ 614c Business Navigator, iPAQ 900 Series, iPAQ 910 Series, iPAQ 912, iPAQ 914c Business Messenger, iPAQ rw6800 Series, iPAQ rw6815, iPAQ rw6818, iPAQ rw6828, iPAQ rx5000 Series, iPAQ rx5700, iPAQ rx5710, iPAQ rx5720, iPAQ rx5725, iPAQ rx5730, iPAQ rx5765, iPAQ rx5770, iPAQ rx5775, iPAQ rx5780, iPAQ rx5900, iPAQ rx5910, iPAQ rx5915, iPAQ rx5935, iPAQ rx5940, iPAQ rx5965, iPAQ 612, iPAQ rx4240</p>
P6	<p>DOPOD Series : ----</p> <p>565, 577W, 586, 595, 818, 838, 838 Pro, 900, C720, C720W, C730, C750, C800, C858, CHT 9100, D600, D802, D810, GALA100, M700, P100, P660, P800, P860, PU10, S1, S600, WIZA100</p> <p>E-TEN Series : ----</p> <p>Glofish X600, Glofish X650, Glofish X800, X500, X550, m700</p> <p>HTC Series : ----</p> <p>C730, G1, Google nexus one, Hero, Kaiser, Magic, MteoR, P3450, P3470, P3600, P3650, P3700, P4350, P5520, P6300, P6500, Qtek 9000, Qtek S200, RAPH100, Raphael, S620, S740, Smart, T7272, Tattoo A3233, Touch, Touch 3G, Touch Cruise 2007, Touch Cruise 2009, Touch Cruise P3650, Touch Cruise P3651, Touch Cruise T4242, Touch Diamond, Touch Diamond 2, Touch Diamond P3702, Touch Dual, Touch HD, Touch Pro, Touch Pro 2, Touch Viva, TyTN, TyTN II, TyTN III</p> <p>MITAC Series : ----</p> <p>Mio A201, Mio A501, Mio A700, Mio P350, Mio P550</p> <p>MWG Series : ----</p> <p>Atom V, ZINC II</p> <p>O2 Series : ----</p>

Graphite, Xda Atom, Xda Atom Exec, Xda Atom Life, Xda Atom Pure, Xda II mini, Xda Stealth, Xda Zinc, xphone II

T-MOBILE

Series : ----

Dream

ARCHOS

Series : ----

AV400, AV420, AV500 Mobile DVR (30GB), Gmini 500 (30GB)

CANON

Series : ----

Digital IXUS 430, Digital IXUS 500, PowerShot A10, PowerShot A20, PowerShot A30, PowerShot A40, PowerShot A60, PowerShot A610, PowerShot A620, PowerShot A630, PowerShot A640, PowerShot A70, PowerShot A75, PowerShot A80, PowerShot A85, PowerShot A95, PowerShot S100, PowerShot S110, PowerShot S200, PowerShot S230, PowerShot S300, PowerShot S330, PowerShot S400, PowerShot S410, PowerShot S500, iVlS HF100

CASIO

Series : ----

Exilim EX-Z30

CONTAX

Series : ----

DX010242, I4R, SL300RT, U4R

CREATIVE

Series : ----

DAP-HD0014, PMC-HD0002, ZEN TOUCH, ZEN VISION

EPSON

Series : ----

P-2000, P-2500, P-3000, P-4000, P-4500, P-5000

FUJIFILM

Series : ----

CLIP IT, CLIP IT 80, CLIP IT DS-10/10S, CLIP IT DS-20, CLIP IT DS-30, DS-220, DS-260HD, DS-300, DS-560, DS-565, DX-10, DX-7, DX-9, FinePix 1200, FinePix 1300, FinePix 1400 Zoom, FinePix 1400Z, FinePix 1700Z, FinePix 2200, FinePix 2300, FinePix 2400 Zoom, FinePix 2400Z, FinePix 2500Z, FinePix 2700Z, FinePix 2800, FinePix 2800 Zoom, FinePix 3800, FinePix 402, FinePix 4500z, FinePix 4800 Zoom, FinePix 4800z, FinePix 4900 Zoom, FinePix 4900z, FinePix 500, FinePix 50i, FinePix 600z, FinePix 6800 Zoom, FinePix 6800z, FinePix 6900 Zoom, FinePix 6900z, FinePix 700, FinePix F20, FinePix F30, FinePix F31fd, FinePix F401, FinePix F401 Zoom, FinePix F402, FinePix F40fd, FinePix F410, FinePix F440, FinePix F440 Zoom, FinePix F45fd, FinePix F460, FinePix F47fd, FinePix F601, FinePix F601 Zoom, FinePix F602, FinePix F650, FinePix F810 Zoom, FinePix PR21, FinePix S1 Pro, FinePix S2 Pro, FinePix S20 Pro, FinePix S3000, FinePix S304, FinePix S3100, FinePix S3500, FinePix S5 Pro, FinePix S5000, FinePix S5100, FinePix S5200, FinePix S5500, FinePix S5600, FinePix S5700, FinePix S5800, FinePix S602, FinePix S700, FinePix S7000, FinePix S8000fd, FinePix S9000, FinePix S9500, FinePix V10, FinePix Z1, MX Series, MX-1200, MX-1700 Zoom, MX-2700, MX-2900 Zoom, MX-500, MX-600 Zoom, MX-700

GE

Series : ----

E1030

KODAK

Series : ----

EasyShare DC4800, EasyShare DX6490, EasyShare DX7440, EasyShare DX7590, EasyShare DX7630, EasyShare LS420, EasyShare LS443, EasyShare LS633, EasyShare LS743, EasyShare LS753, EasyShare LS755, EasyShare M753, EasyShare M853, EasyShare M873, EasyShare M883, EasyShare One, EasyShare P712, EasyShare P850, EasyShare P880, EasyShare V1003, EasyShare V530, EasyShare V550, EasyShare V570, EasyShare V603, EasyShare V610, EasyShare V705, EasyShare V803, EasyShare Z730, EasyShare Z7590, EasyShare Z760

KYOCERA

Series : ----

FineCam S3, Finecam M400R, Finecam M410R, Finecam S3L, Finecam S3R, Finecam S3x, Finecam S4, Finecam S5, Finecam S5R, Finecam SL300R, Finecam SL400R, SAMURAI 2100DG

MINOLTA

Series : ----

DIMAGE A1, Dimage X, Dimage X50, Dimage X60, Dimage Xg, Dimage Xt

OLYMPUS

Series : ----

IR-300, IR-500, MR-100, MR-500i, SP-700

Brand : PANASONIC

Series : ----

Lumix DMC-F1, Lumix DMC-F7

ROLLEI

Series : ----

Prego dp4200, Prego dp6200, Prego dp8300

SANYO

Series : ----

DSC-MZ3

SONY

Series : ----

PSP-1000, PSP-2006, PlayStation Portable (PSP)

TOSHIBA

Series : ----

Allegertto M3, Allegertto M4, Allegertto M40, Allegertto M5, Allegertto M70, PDR-M11, PDR-M21, PDR-M25, PDR-M4, PDR-M5, PDR-M6, PDR-M60, PDR-M61, PDR-M65, PDR-M70, PDR-M71, PDR-M81

ARCHOS

Series : ----

AV400, AV420, AV500 Mobile DVR (30GB), Gmini 500 (30GB)

CANON

Series : ----

Digital IXUS 430, Digital IXUS 500, PowerShot A10, PowerShot A20, PowerShot A30, PowerShot A40, PowerShot A60, PowerShot A610, PowerShot A620, PowerShot A630, PowerShot A640, PowerShot A70, PowerShot A75, PowerShot A80, PowerShot A85, PowerShot A95, PowerShot S100, PowerShot S110, PowerShot S200, PowerShot S230, PowerShot S300, PowerShot S330, PowerShot S400, PowerShot S410, PowerShot S500, iVIS HF100

CASIO

Series : ----

Exilim EX-Z30

CONTAX

Series : ----

DX010242, I4R, SL300RT, U4R

CREATIVE

Series : ----

DAP-HD0014, PMC-HD0002, ZEN TOUCH, ZEN VISION

EPSON

Series : ----

P-2000, P-2500, P-3000, P-4000, P-4500, P-5000

FUJIFILM

Series : ----

CLIP IT, CLIP IT 80, CLIP IT DS-10/10S, CLIP IT DS-20, CLIP IT DS-30, DS-220, DS-260HD, DS-300, DS-560, DS-565, DX-10, DX-7, DX-9, FinePix 1200, FinePix 1300, FinePix 1400 Zoom, FinePix 1400Z, FinePix 1700Z, FinePix 2200, FinePix 2300, FinePix 2400 Zoom, FinePix 2400Z, FinePix 2500Z, FinePix 2700Z, FinePix 2800, FinePix 2800 Zoom, FinePix 3800, FinePix 402, FinePix 4500z, FinePix 4800 Zoom, FinePix 4800z, FinePix 4900 Zoom, FinePix 4900z, FinePix 500, FinePix 50i, FinePix 600z, FinePix 6800 Zoom, FinePix 6800z, FinePix 6900 Zoom, FinePix 6900z, FinePix 700, FinePix F20, FinePix F30, FinePix F31fd, FinePix F401, FinePix F401 Zoom, FinePix F402, FinePix F40fd, FinePix F410, FinePix F440, FinePix F440 Zoom, FinePix F45fd, FinePix F460, FinePix F47fd, FinePix F601, FinePix F601 Zoom, FinePix F602, FinePix F650, FinePix F810 Zoom, FinePix PR21, FinePix S1 Pro, FinePix S2 Pro, FinePix S20 Pro, FinePix S3000, FinePix S304, FinePix S3100, FinePix S3500, FinePix S5 Pro, FinePix S5000, FinePix S5100, FinePix S5200, FinePix S5500, FinePix S5600, FinePix S5700, FinePix S5800, FinePix S602, FinePix S700, FinePix S7000, FinePix S8000fd, FinePix S9000, FinePix S9500, FinePix V10, FinePix Z1, MX Series, MX-1200, MX-1700 Zoom, MX-2700, MX-2900 Zoom, MX-500, MX-600 Zoom, MX-700

GE

Series : ----

E1030

KODAK

Series : ----

EasyShare DC4800, EasyShare DX6490, EasyShare DX7440, EasyShare DX7590, EasyShare DX7630, EasyShare LS420, EasyShare LS443, EasyShare LS633, EasyShare LS743, EasyShare LS753, EasyShare LS755, EasyShare M753, EasyShare M853, EasyShare M873, EasyShare M883, EasyShare One Series, EasyShare P712, EasyShare P850, EasyShare P880, EasyShare V1003, EasyShare V530, EasyShare V550, EasyShare V570, EasyShare V603, EasyShare V610, EasyShare V705, EasyShare V803, EasyShare Z730, EasyShare Z7590, EasyShare Z760

KYOCERA

Series : ----

FineCam S3, Finecam M400R, Finecam M410R, Finecam S3L, Finecam S3R, Finecam S3x, Finecam S4, Finecam S5, Finecam S5R, Finecam SL300R, Finecam SL400R, SAMURAI 2100DG

MINOLTA

Series : ----

DIMAGE A1, Dimage X, Dimage X50, Dimage X60, Dimage Xg, Dimage Xt

OLYMPUS

Series : ----

IR-300, IR-500, MR-100, MR-500i, SP-700

PANASONIC

Series : ----

Lumix DMC-F1, Lumix DMC-F7

ROLLEI

Series : ----

DP8300, Prego dp4200, Prego dp6200

SANYO

Series : ----

DSC-MZ3

SONY

Series : ----

PSP-1000, PSP-2006, PlayStation Portable (PSP)

TOSHIBA

Series : ----

Allegretto M3, Allegretto M4, Allegretto M40, Allegretto M5, Allegretto M70, PDR-M11, PDR-M21, PDR-M25, PDR-M4, PDR-M5, PDR-M6, PDR-M60, PDR-M61, PDR-M65, PDR-M70, PDR-M71, PDR-M81